FIG. 1

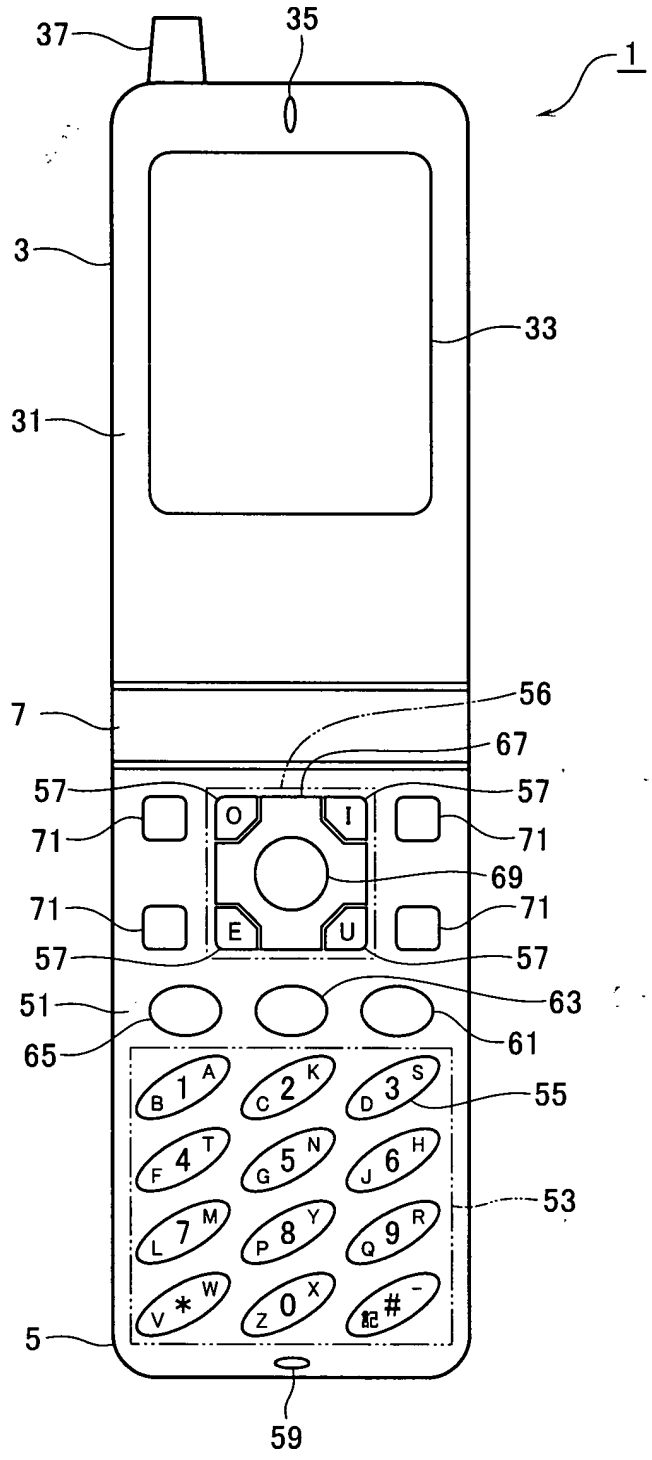

FIG. 2

Operating key (Dial button)	Numeral input-mode	Alphabetic Kana-input Mode English letter Input-Mode
1	1	AB
2	2	KC
3	3	SD
4	4	TF
5	5	NG
6	6	HJ
7	7	ML
8	8	YP
9	9	RQ
0	0	WV
*		XZ

FIG. 3

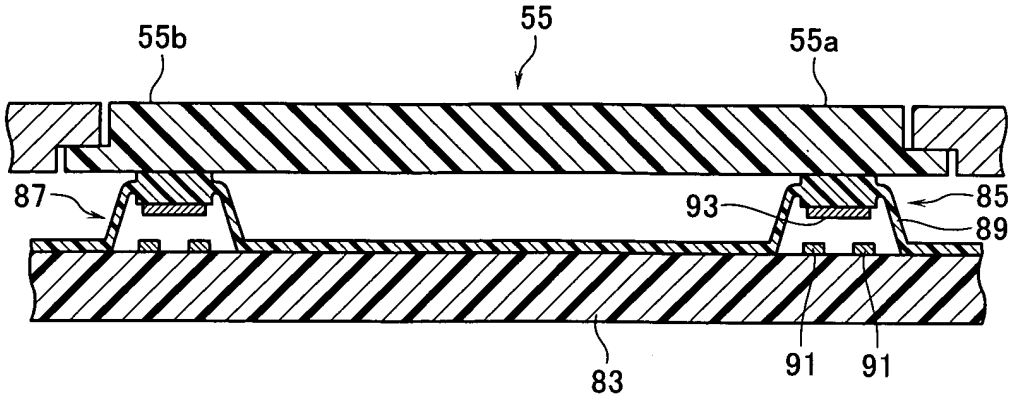

FIG. 4

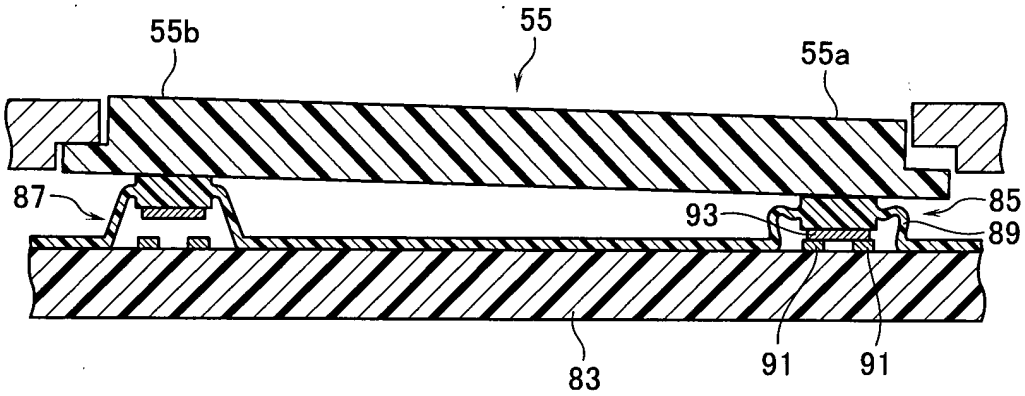

FIG. 5

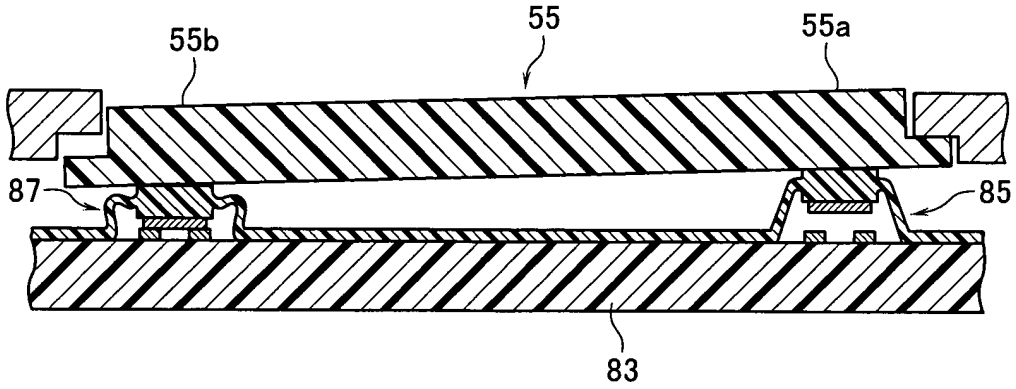

FIG. 6

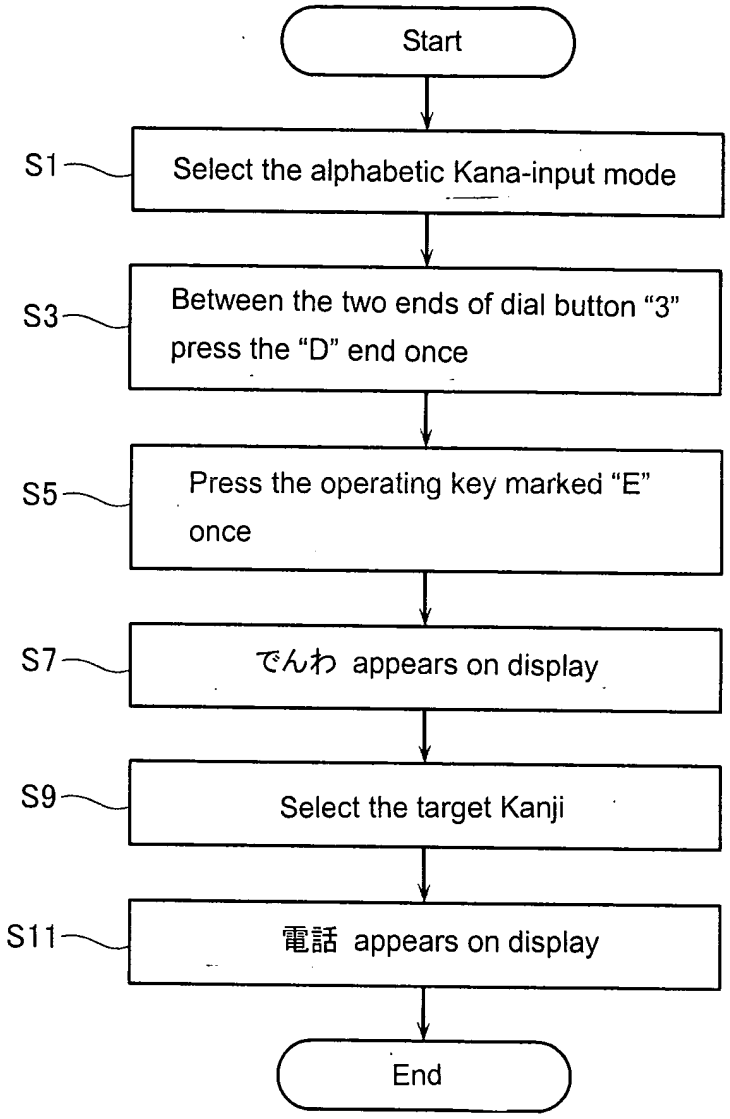
Start
S1
Select the alphabetic Kana-input mode
S3
Between the two ends of dial button "3" press the "D" end once
S5
Press the operating key marked "E" once
S7
でんわ appears on display
S9
Select the target Kanji
S11
電話 appears on display
End

FIG. 7

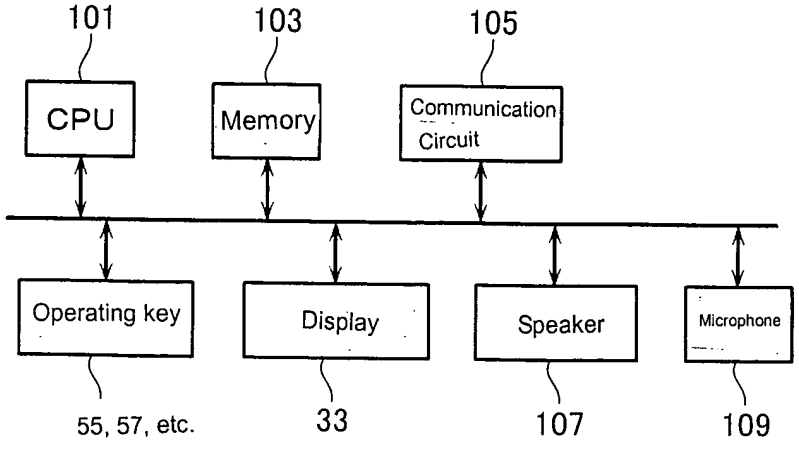
101
103
105
CPU
Memory
Communication Circuit
Operating key
Display
Speaker
Microphone
55, 57, etc.
33
107
109

FIG. 8

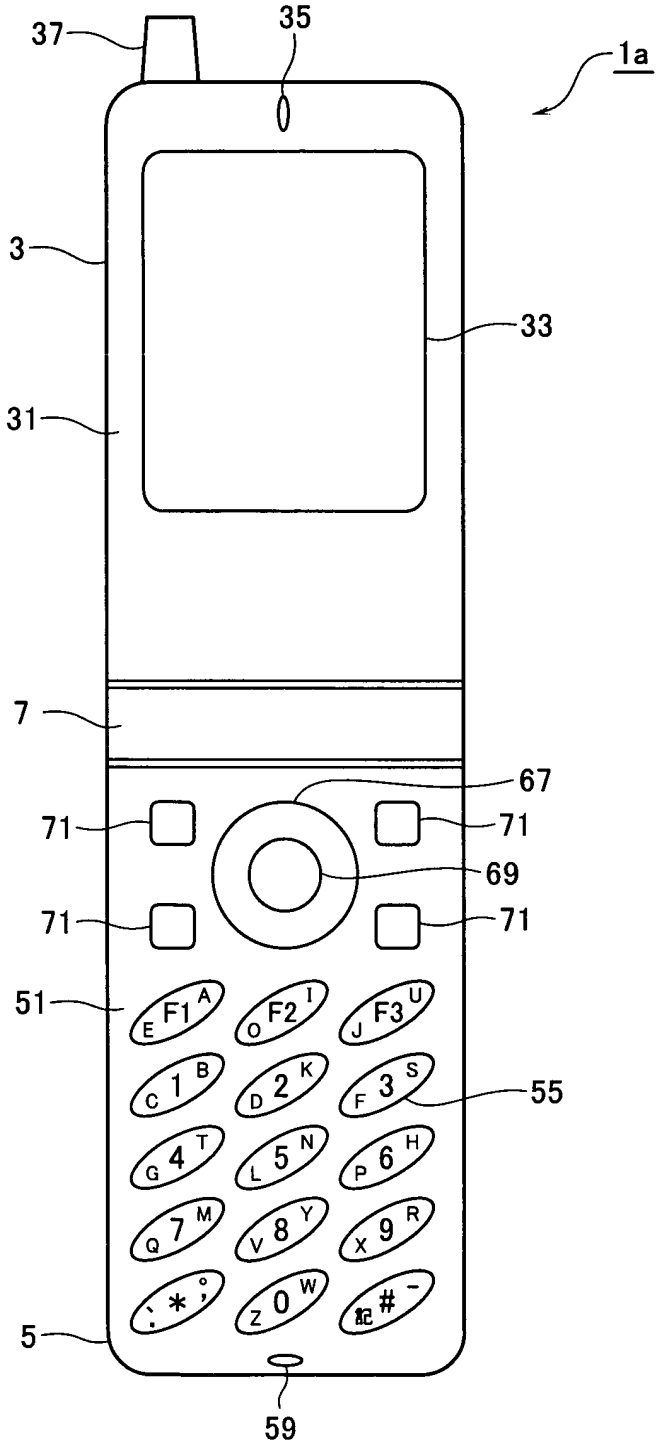

FIG. 9

Character-Input Button	Alphabetic Kana-input Mode Eng. letter-input mode
F1	A B
F2	I O
F3	U J
1	B 1 C
2	K 2 D
3	S 3 F
4	T 4 G
5	N 5 L
6	H 6 P
7	M 7 Q
8	Y 8 V
9	R 9 X
0	W 0 Z
*	` ° . ,

FIG. 10

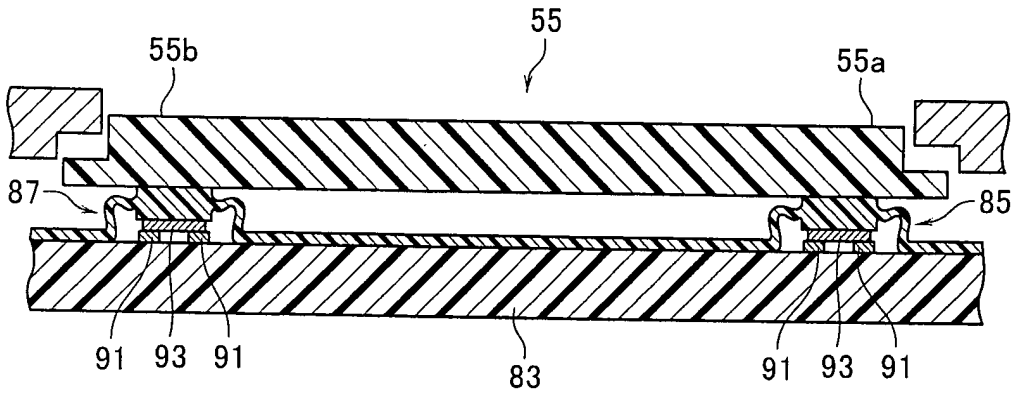

FIG. 11

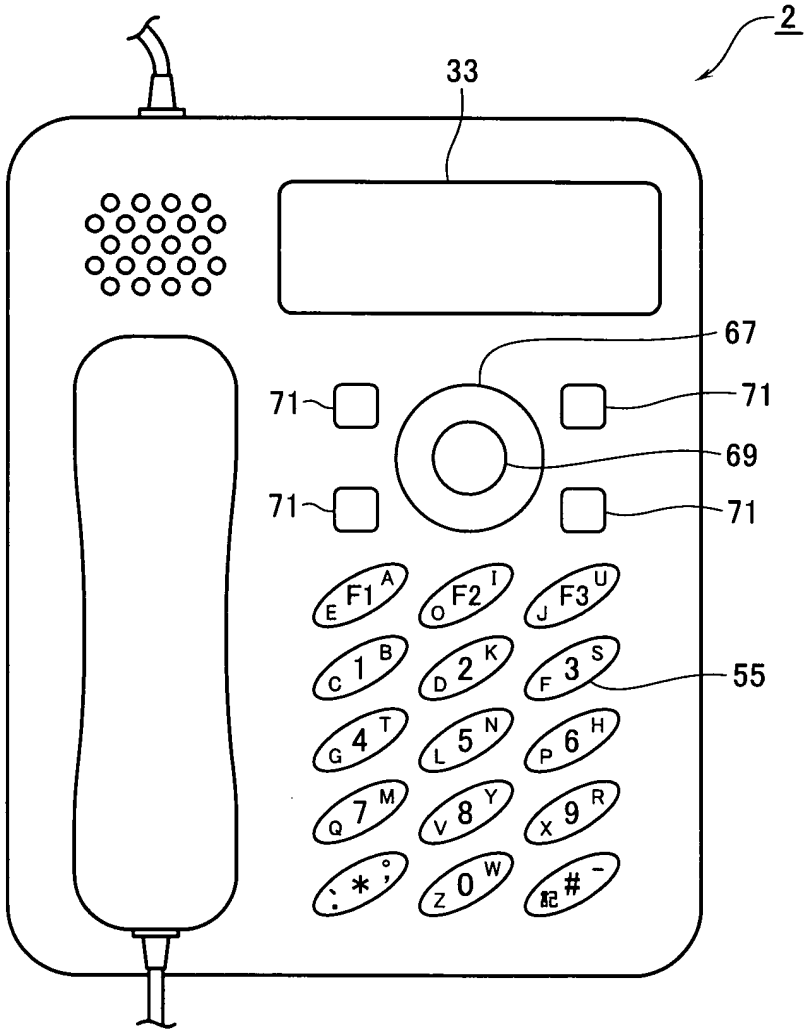

FIG. 12

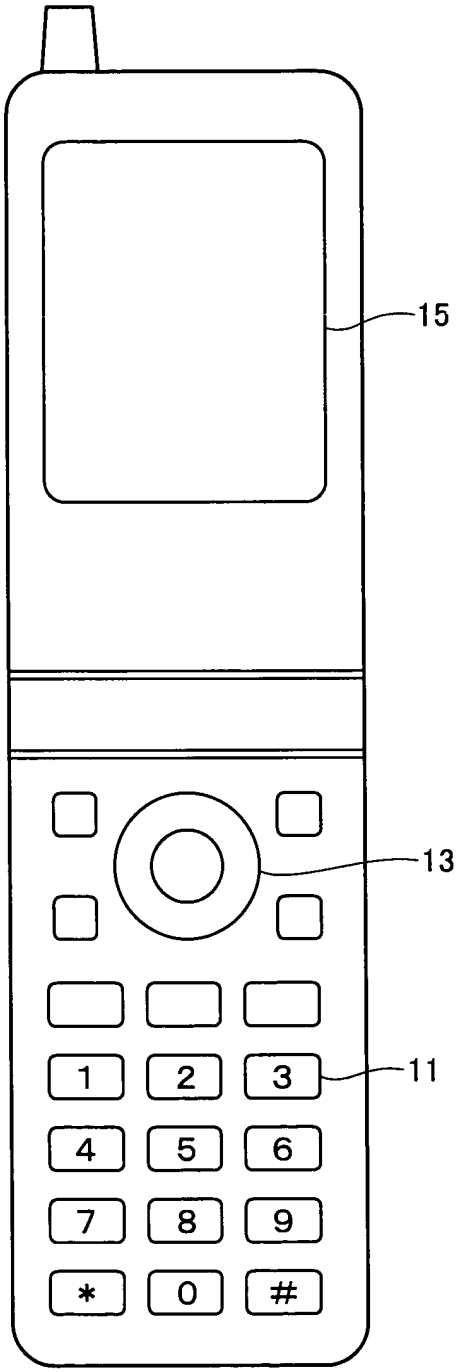

FIG. 13

Dial Button	Kana-input mode	Eng. letter-input mode
1	あいうえおぁいぅえぉ	@
2	かきくけこ	ABCabc
3	さしすせそ	DEFdef
4	たちつてとっ	GHIghi
5	なにぬねの	JKLjkl
6	はひふへほ	MNOmno
7	まみむめも	PQRSpqrs
8	やゆよゃゅょ	TUVtuv
9	らりるれろ	WXYZwxyz
0	わをん	